



		Service Intervals (Odometer reading or months, whichever occurs first)															
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180
Odometer Reading × 1000 km		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																	
Check wheel alignment (visual inspection for tyre wear)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I :Every 7,500km or every 6 months														
Check brake shoe linings and drums (drum in disc) for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I :Every 7,500km or every 6 months														
Check fuel hoses and pipes for leakage or deterioration			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check tyre pressures			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check wipers rubbers			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																	
Check fluid level in CVT			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace CVT fluid		Normal usage	R :Every 75,000km														
		Severe usage	R :Every 30,000km														
Replace engine oil	API classification: " For service SM" or higher ACEA classification: " For service A1/B1, A3/B3, A3/B4 or A5/B5 "	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Replace engine oil filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Check engine idling speed			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check CO concentration			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check exhaust gas recirculation (EGR) system			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OTHERS</b>																	
Check body condition for damage			I :Every year														
Road test			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

(Servicing beyond 225,000km or 180 months should continue to be performed as nominated, commencing from the 30,00km schedule)

NOTE \*1: If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the following cases :

- |  |  |
|--|--|
| (1) Driving in dusty area.   | (6) Towing of a trailer.   |
| (2) Driving on rough roads, on submerged roads, or hilly areas.                  | (7) Use as a taxi or as a rent-a-car.  |
| (3) Driving in cold zones.   | (8) When more than 50% of the driving is in heavy city traffic and the ambient temperature is 32° or more. |
| (4) Engine idling for a long time, or short-distance travel during cold weather. | (9) When more than 50% of the driving is at 120km/h or more and the ambient temperature is 30° or more.    |
| (5) Frequent sudden application of brakes.                                       |  |