

## MMAL PERIODIC INSPECTION AND MAINTENANCE SCHEDULE 18 MY NX PAJERO

For items which indicate both distance and time (in months), the inspection should be made at whichever (distance or time) comes first.

### Maintenance operation code

I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable

Items	Service Intervals (Odometer reading or months, whichever occurs first)		Service Intervals (Odometer reading or months, whichever occurs first)																				
			12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
Months			15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
Odometer Reading	× 1000 km		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	240	255	270	285	300	
<b>OPERATIONS INSIDE THE ENGINE COMPARTMENT</b>																							
Check drive belt for cracks, fraying, wear, and adjust its tension			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check vacuum pump oil hose for damage (diesel - powered vehicles)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check intake air hose and turbocharger oil hose for damage (vehicles with turbocharger)				I		I		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check valve clearance *1			Diesel engine		*I	I	*I	I	*I	I	*I	I	*I	I	*I	I	*I	I	*I	I	*I	I	
			*: (If valve noise increases, check valve clearance. [except Actual inspection timing])																				
Check radiator hoses for damage and proper connection				I		I		I		I		I		I		I		I		I		I	
Check engine coolant level in reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace engine coolant			Diesel engine				R				R				R				R			R	
Check air cleaner element for clogging and damage			Normal usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
			Severe usage		I :Every 7,500km or every 6 months																		
Replace air cleaner element			Normal usage				R			R			R			R			R			R	
			Severe usage		R :More frequently																		
Check fluid level in brake reservoir and clutch reservoir			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace brake fluid				R		R		R		R		R		R		R		R		R		R	
Check battery condition			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace fuel filter			Diesel engine			R		R		R		R		R		R		R		R		R	
<b>OPERATIONS UNDER THE VEHICLE</b>																							
Check suspension system for damage and looseness			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check suspension arm ball joints for play, and dust covers for damage			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Lubricate suspension arm, steering linkage and propeller shaft with grease fitting				L		L		L		L		L		L		L		L		L		L	
Check driveshaft boots for damage			Normal usage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
			Severe usage		I :Every 7,500km																		
Check steering linkage for damage and loose connections (including seals and boots)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check transfer case for oil leakage (In case of leakage, check the oil level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace gear oil in transfer			FR-BASE 4WD		Normal usage		R : Every 90,000km																
					Severe usage		R : Every 30,000km																
Check front and rear differential for oil leakage (In case of leakage, check the oil level)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace gear oil in front and rear differential			Conventional differential or VCU type LSD		Normal usage		R : Every 75,000km																
					Severe usage		R : Every 30,000km																
Check exhaust pipe connections for gas leakage, and check pipe installation				I		I		I		I		I		I		I		I		I		I	

